


QuikTRAYTM ROLLOUT SYSTEM

DEPENDABLE...DURABLE...DEFINITELY






Parts and Order Information

QuikTRAYTM ROLLOUT SYSTEM

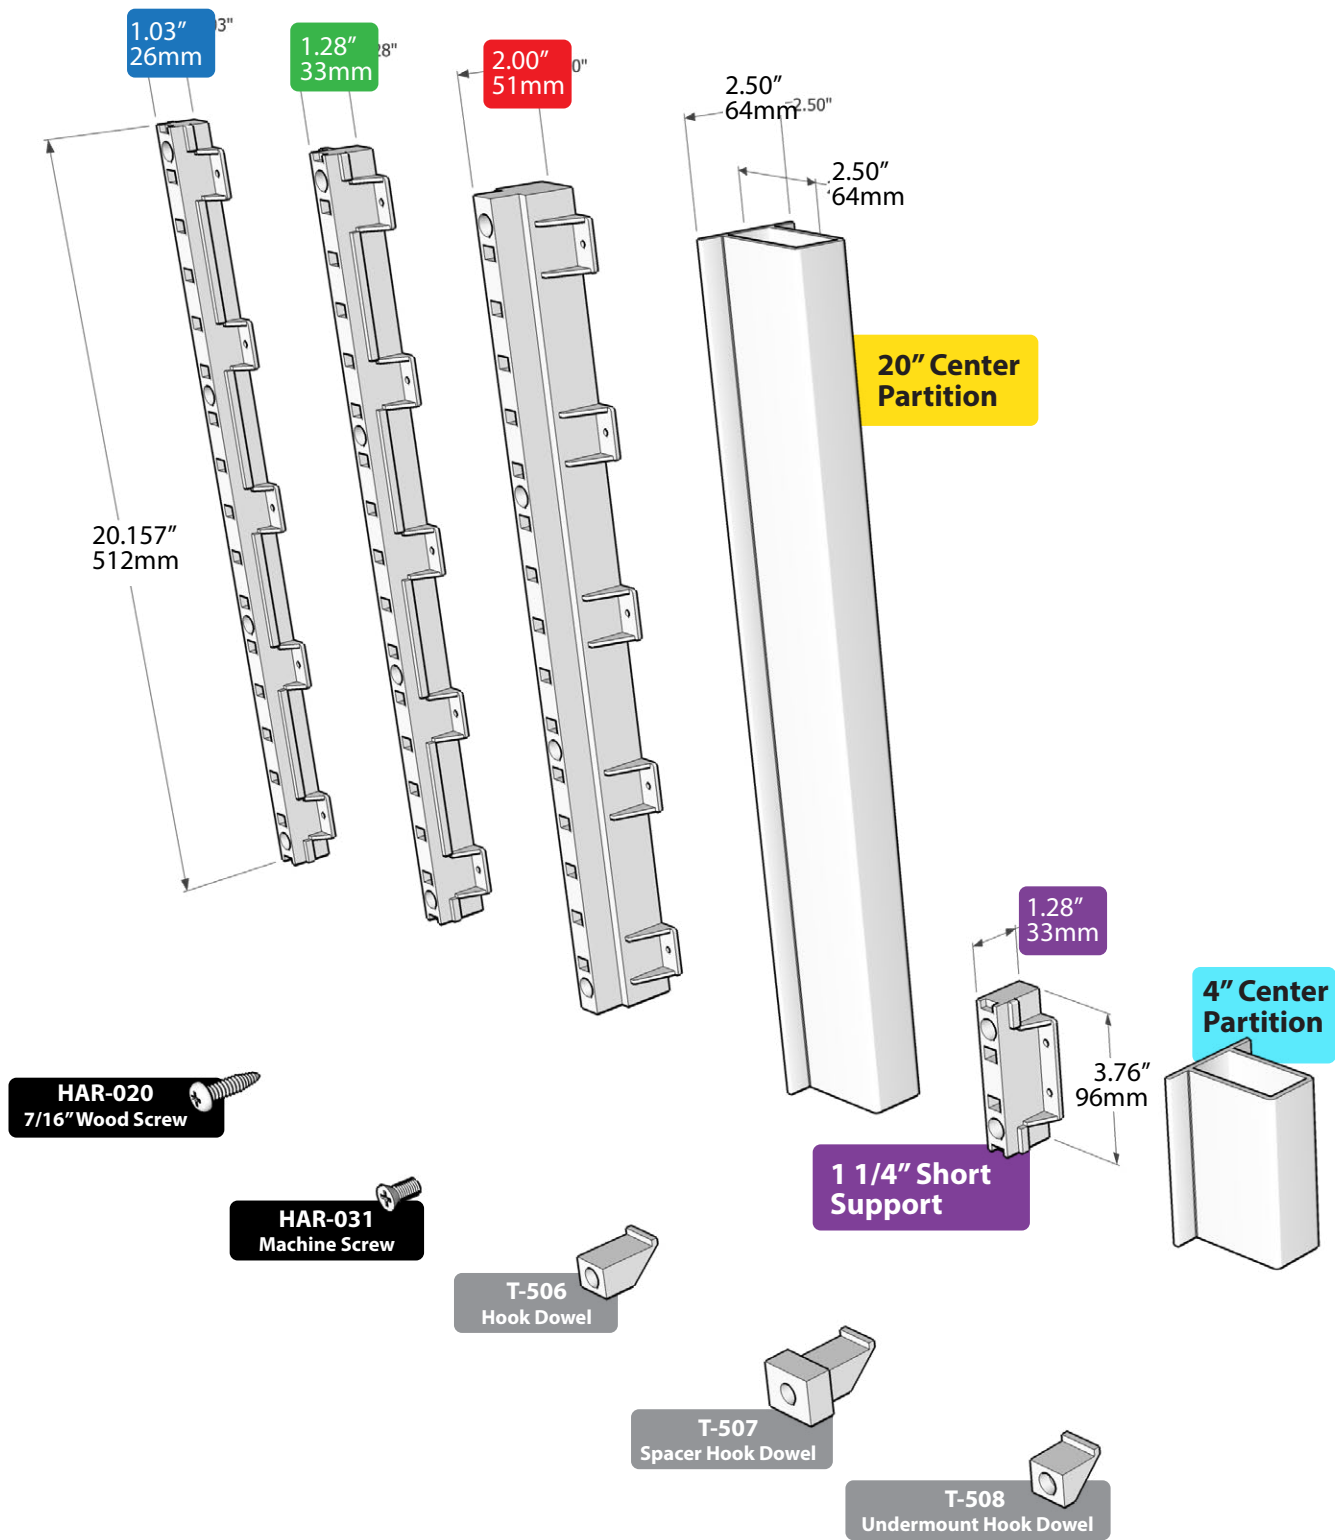

Clear Coated Maple Molding Strips used with regular pilasters

To apply molding strip, a super glue type adhesive can be used

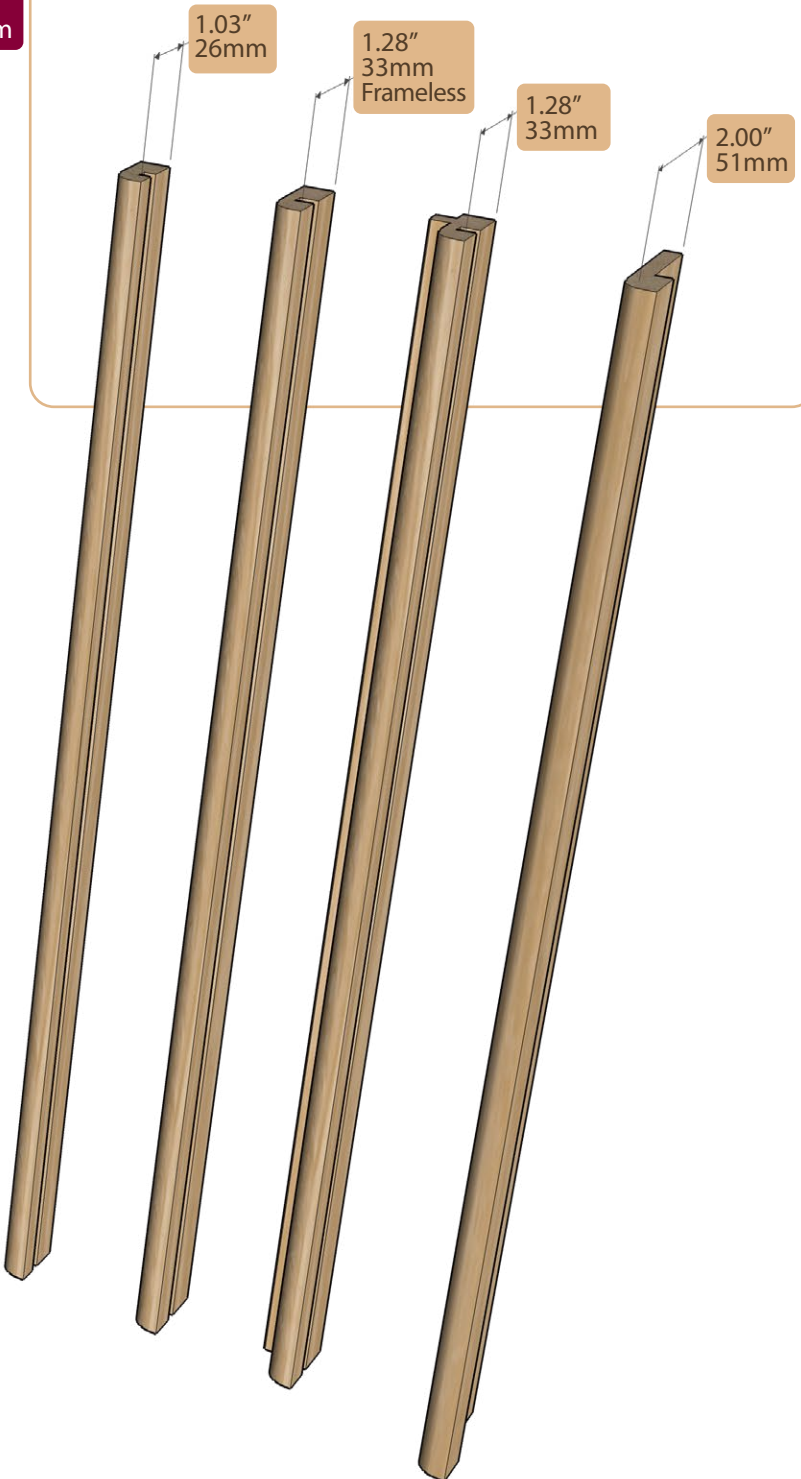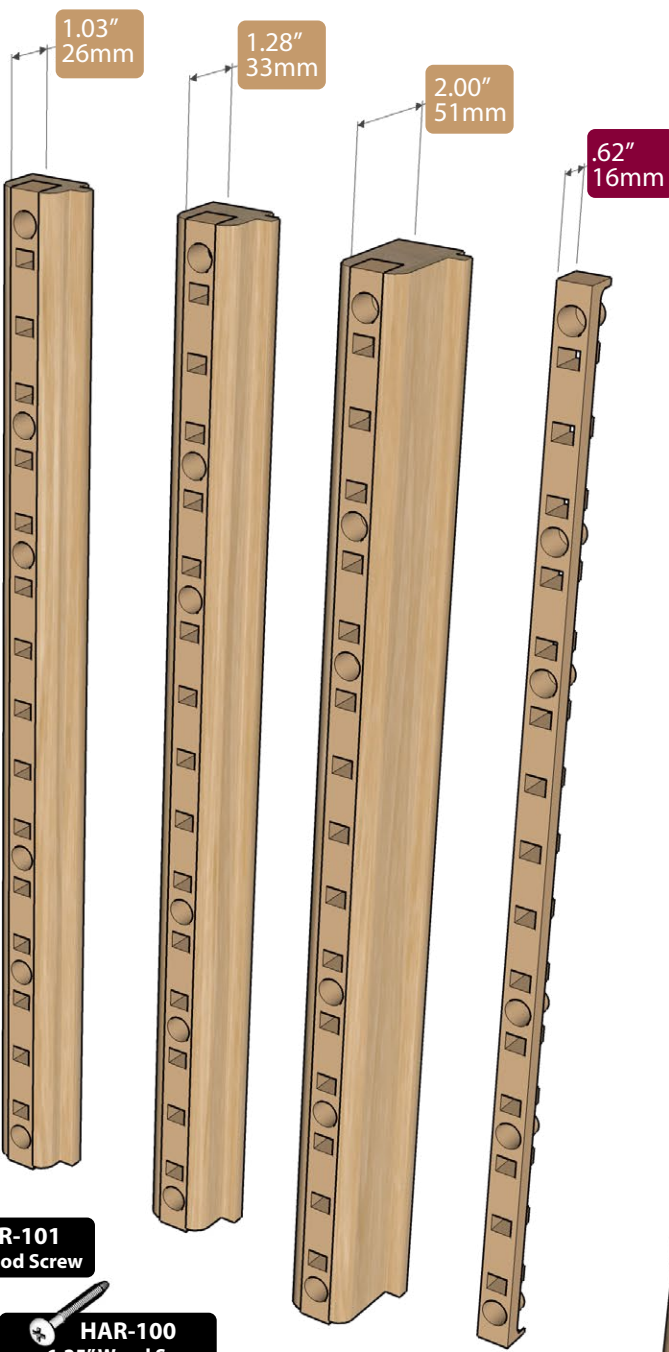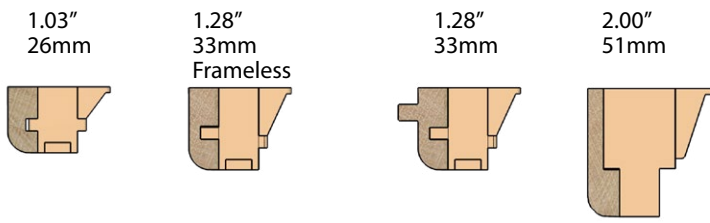

 **HAR-101**
1" Wood Screw

 **HAR-100**
1.25" Wood Screw




 **HAR-079**
2" Wood Screw

	Color	Polybag Contents	Bulk w/ Hardware	Bulk w/ Pilasters Only
1" Pilaster	White	B-520-00	B-500-00	T-500-00
	Beige	B-520-01	B-500-01	T-500-01
	Cream	B-520-02	B-500-02	T-500-02
	Black	B-520-03	B-500-03	T-500-03
	Metallic	B-520-04	B-500-04	T-500-04
1" Pilaster for Undermount	White	B-520-00-U	 Undermount Polybags	
	Beige	B-520-01-U		
	Cream	B-520-02-U		
	Black	B-520-03-U		
	Metallic	B-520-04-U		
1 1/4" Pilaster	White	B-522-00	B-502-00	T-502-00
	Beige	B-522-01	B-502-01	T-502-01
	Cream	B-522-02	B-502-02	T-502-02
	Black	B-522-03	B-502-03	T-502-03
	Metallic	B-522-04	B-502-04	T-502-04
1 1/4" Pilaster for Undermount	White	B-522-00-U	 Undermount Polybags	
	Beige	B-522-01-U		
	Cream	B-522-02-U		
	Black	B-522-03-U		
	Metallic	B-522-04-U		
2" Pilaster	White	B-525-00	B-503-00	T-503-00
	Beige	B-525-01	B-503-01	T-503-01
	Cream	B-525-02	B-503-02	T-503-02
	Black	B-525-03	B-503-03	T-503-03
	Metallic	B-525-04	B-503-04	T-503-04
2" Pilaster for Undermount	White	B-525-00-U	 Undermount Polybags	
	Beige	B-525-01-U		
	Cream	B-525-02-U		
	Black	B-525-03-U		
	Metallic	B-525-04-U		
1 1/4" Short Pilaster	White	B-523-00	B-524-00	T-531-00
	Beige	B-523-01	B-524-01	T-531-01
	Cream	B-523-02	B-524-02	T-531-02
20" Center Partition	White	B-235-00	B-232-00	HAR-034
	Beige	B-235-01	B-232-01	HAR-035
	Cream	B-235-02	B-232-02	HAR-036
4" Center Partition	White	B-263-00	B-264-00	HAR-045
	Beige	B-263-01	B-264-01	HAR-046
	Cream	B-263-02	B-264-02	HAR-047

Insert Color		Single Kit Contents		Bulk	Color	Bulk Inserts
				Pilasters w/ Insert - No Hardware	(No Wood/No Hardware)	
Wood Pilaster (Maple)	1"	Beige	B-510-01 Uses 1" Screw	4 Pilasters B-243 (1") or B-242 (1.25") or B-241 (2") based on size (16 Mounting Screws)	White	T-504-00
	1 1/4"	Beige	B-512-01 Uses 1.25" Screw	B-266 (8 T-506 Hook Dowels & 8 HAR-031 Machine Screws)	Beige	T-504-01
	2"	Beige	B-513-01 Uses 2" Screw	B-309 (8 T-508 Hook Dowels & 8 HAR-031 Machine Screws)	Cream	T-504-02
				INS-030 Instruction Sheet	Black	T-504-03
					Metallic	T-504-04








Molding Strips (Maple)	1"	B-532	2 Clear Coated Maple Molding Strips 1"
	1 1/4" Frameless	B-538	2 Clear Coated Maple Molding Strips 1.25" for Frameless Cabinets
	1 1/4"	B-533	2 Clear Coated Maple Molding Strips 1.25" with Stand-Off
	2"	B-534	2 Clear Coated Maple Molding Strips 2"
	1"	B-535 (10 Pack)	10 Clear Coated Maple Molding Strips 1"
	1 1/4" Frameless	B-539 (10 Pack)	10 Clear Coated Maple Molding Strips 1.25" for Frameless Cabinets
	1 1/4"	B-536 (10 Pack)	10 Clear Coated Maple Molding Strips 1.25" with Stand-Off
	2"	B-537 (10 Pack)	10 Clear Coated Maple Molding Strips 2"

HAR-020 7/16" Wood Screw		HAR-101 1" Wood Screw		T-506 Hook Dowel		T-507 Spacer Hook Dowel	
B-231	20 Screws per Bag (100 Bags per Box)	B-243	16 Screws per Bag (100 Bags per Box)	B-268	200 Hook Dowels per Bag	B-306	200 Hook Dowels per Bag
B-301	100 Screws per Bag	B-246	100 Screws per Bag	B-311	100 Hook Dowels per Bag	B-308	8 Hook Dowels & 8 Machine Screws (50 Bags per Box)
B-302	200 Screws per Bag	HAR-100 1.25" Wood Screw		B-266	8 Hook Dowels & 8 Machine Screws (50 Bags per Box)	T-508 Undermount Hook Dowel	
HAR-031 Machine Screw		B-242	16 Screws per Bag (100 Bags per Box)	B-310	4 Hook Dowels & 4 Machine Screws (50 Bags per Box)	B-307	200 Hook Dowels per Bag
B-267	200 Screws per Bag	B-245	100 Screws per Bag				
B-312	100 Screws per Bag (25 Bags per Box)	HAR-079 2" Wood Screw					
		B-241	16 Screws per Bag (100 Bags per Box)				
		B-244	100 Screws per Bag				

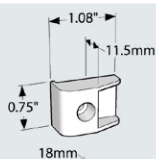		Polybag		Bulk with Bumpers Only		100 Pack
Bumpers		Natural	B-333	2 Bumpers	T-161-00	B-401-00
		White	B-334	2 HAR-048 #6 x 1/2 TH Phillips Type	T-161-01	B-401-01
		Beige	B-335	(50 bags per box)	T-161-02	B-401-02
		Natural	B-336	2 Bumpers	T-160-00	B-400-00
		White	B-337	2 HAR-048 #6 x 1/2 TH Phillips Type	T-160-01	B-400-01
		Beige	B-338	(50 bags per box)	T-160-02	B-400-02
		Natural	B-373	2 Bumpers	C-247-00	B-402-00
		White	B-374	2 HAR-048 #6 x 1/2 TH Phillips Type	C-247-01	B-402-01
		Beige	B-375	(50 bags per box)	C-247-02	B-402-02
		Gray	B-376		C-247-03	B-402-03
					2000 Bumpers per box	
					2000 Bumpers per box	
				1000 Bumpers per box		

Installation

- 1** Place QuikTRAY™ pilaster behind face-frame or set back, according to type of cabinet construction or hinges being used. Rest pilaster against cabinet bottom. Fasten with 5 wood screws or 4 Euro Screws.
- 2** Attach hook dowels (hooks pointing up) at front and back of drawer slide. Front hook dowels on slides must be mounted as far forward as possible.
- 3** To position back pilaster, insert two drawer slides of your choice to top and bottom of secured front pilaster and to unattached rear pilaster. Float rear pilaster into position and fasten with screws. Repeat procedure on the other side.
- 4** Move slides to desired position, inserting at slight angle.
- 4a** With patented hook dowels, no tools are required to install slides and trays. Just insert dowel with hook pointing up, then push down to lock into place.
- 4b** Hook dowels allow slides to move laterally to adjust for cabinet and drawer width tolerances.
- 5** Install drawers or trays.

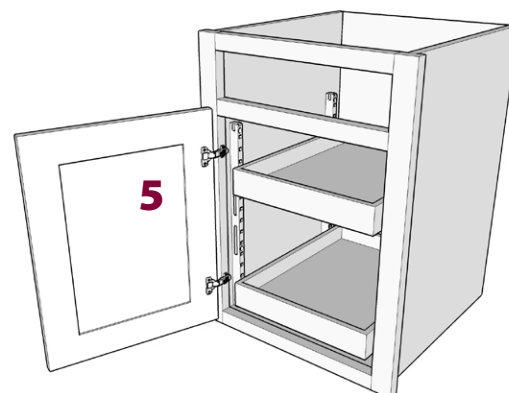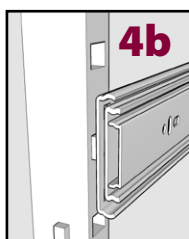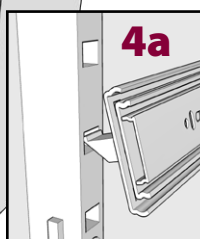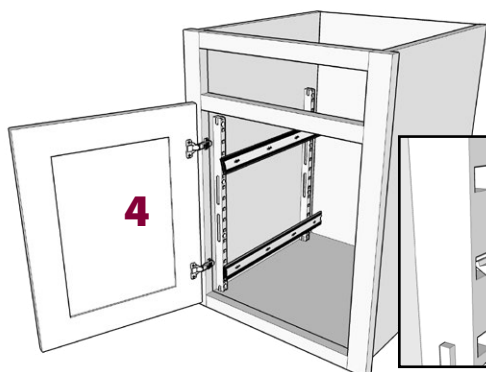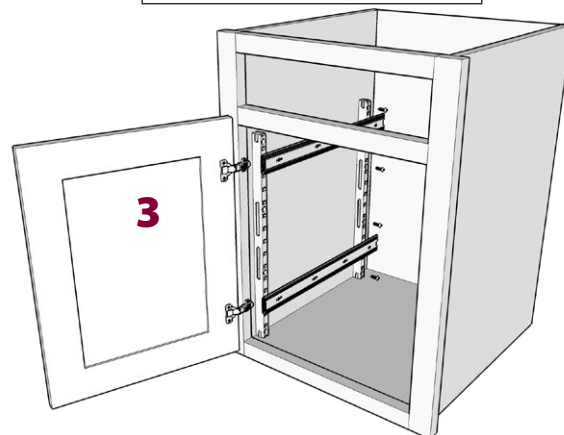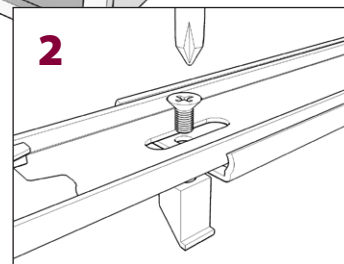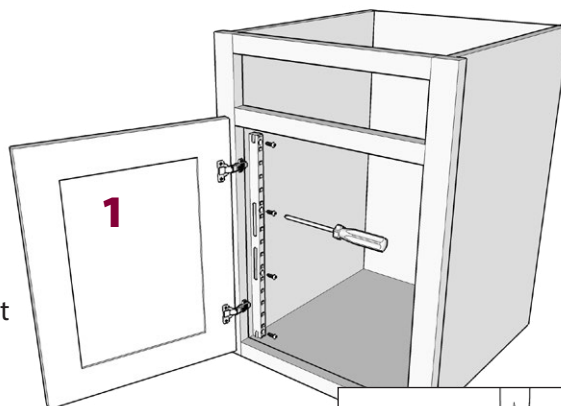

More installation information and video available at www.quiktray.com.



January 2017

TENN-TEX
PLASTICS INC.

1.800.TENN.TEX
8011 National Service Road
Colfax, NC 27235

WWW.QUIKTRAY.COM
WWW.TENNTX.COM

WWW.BRACKETSOLUTIONS.COM
WWW.QUIKTRAYSTORAGESOLUTIONS.COM



Made in the USA